


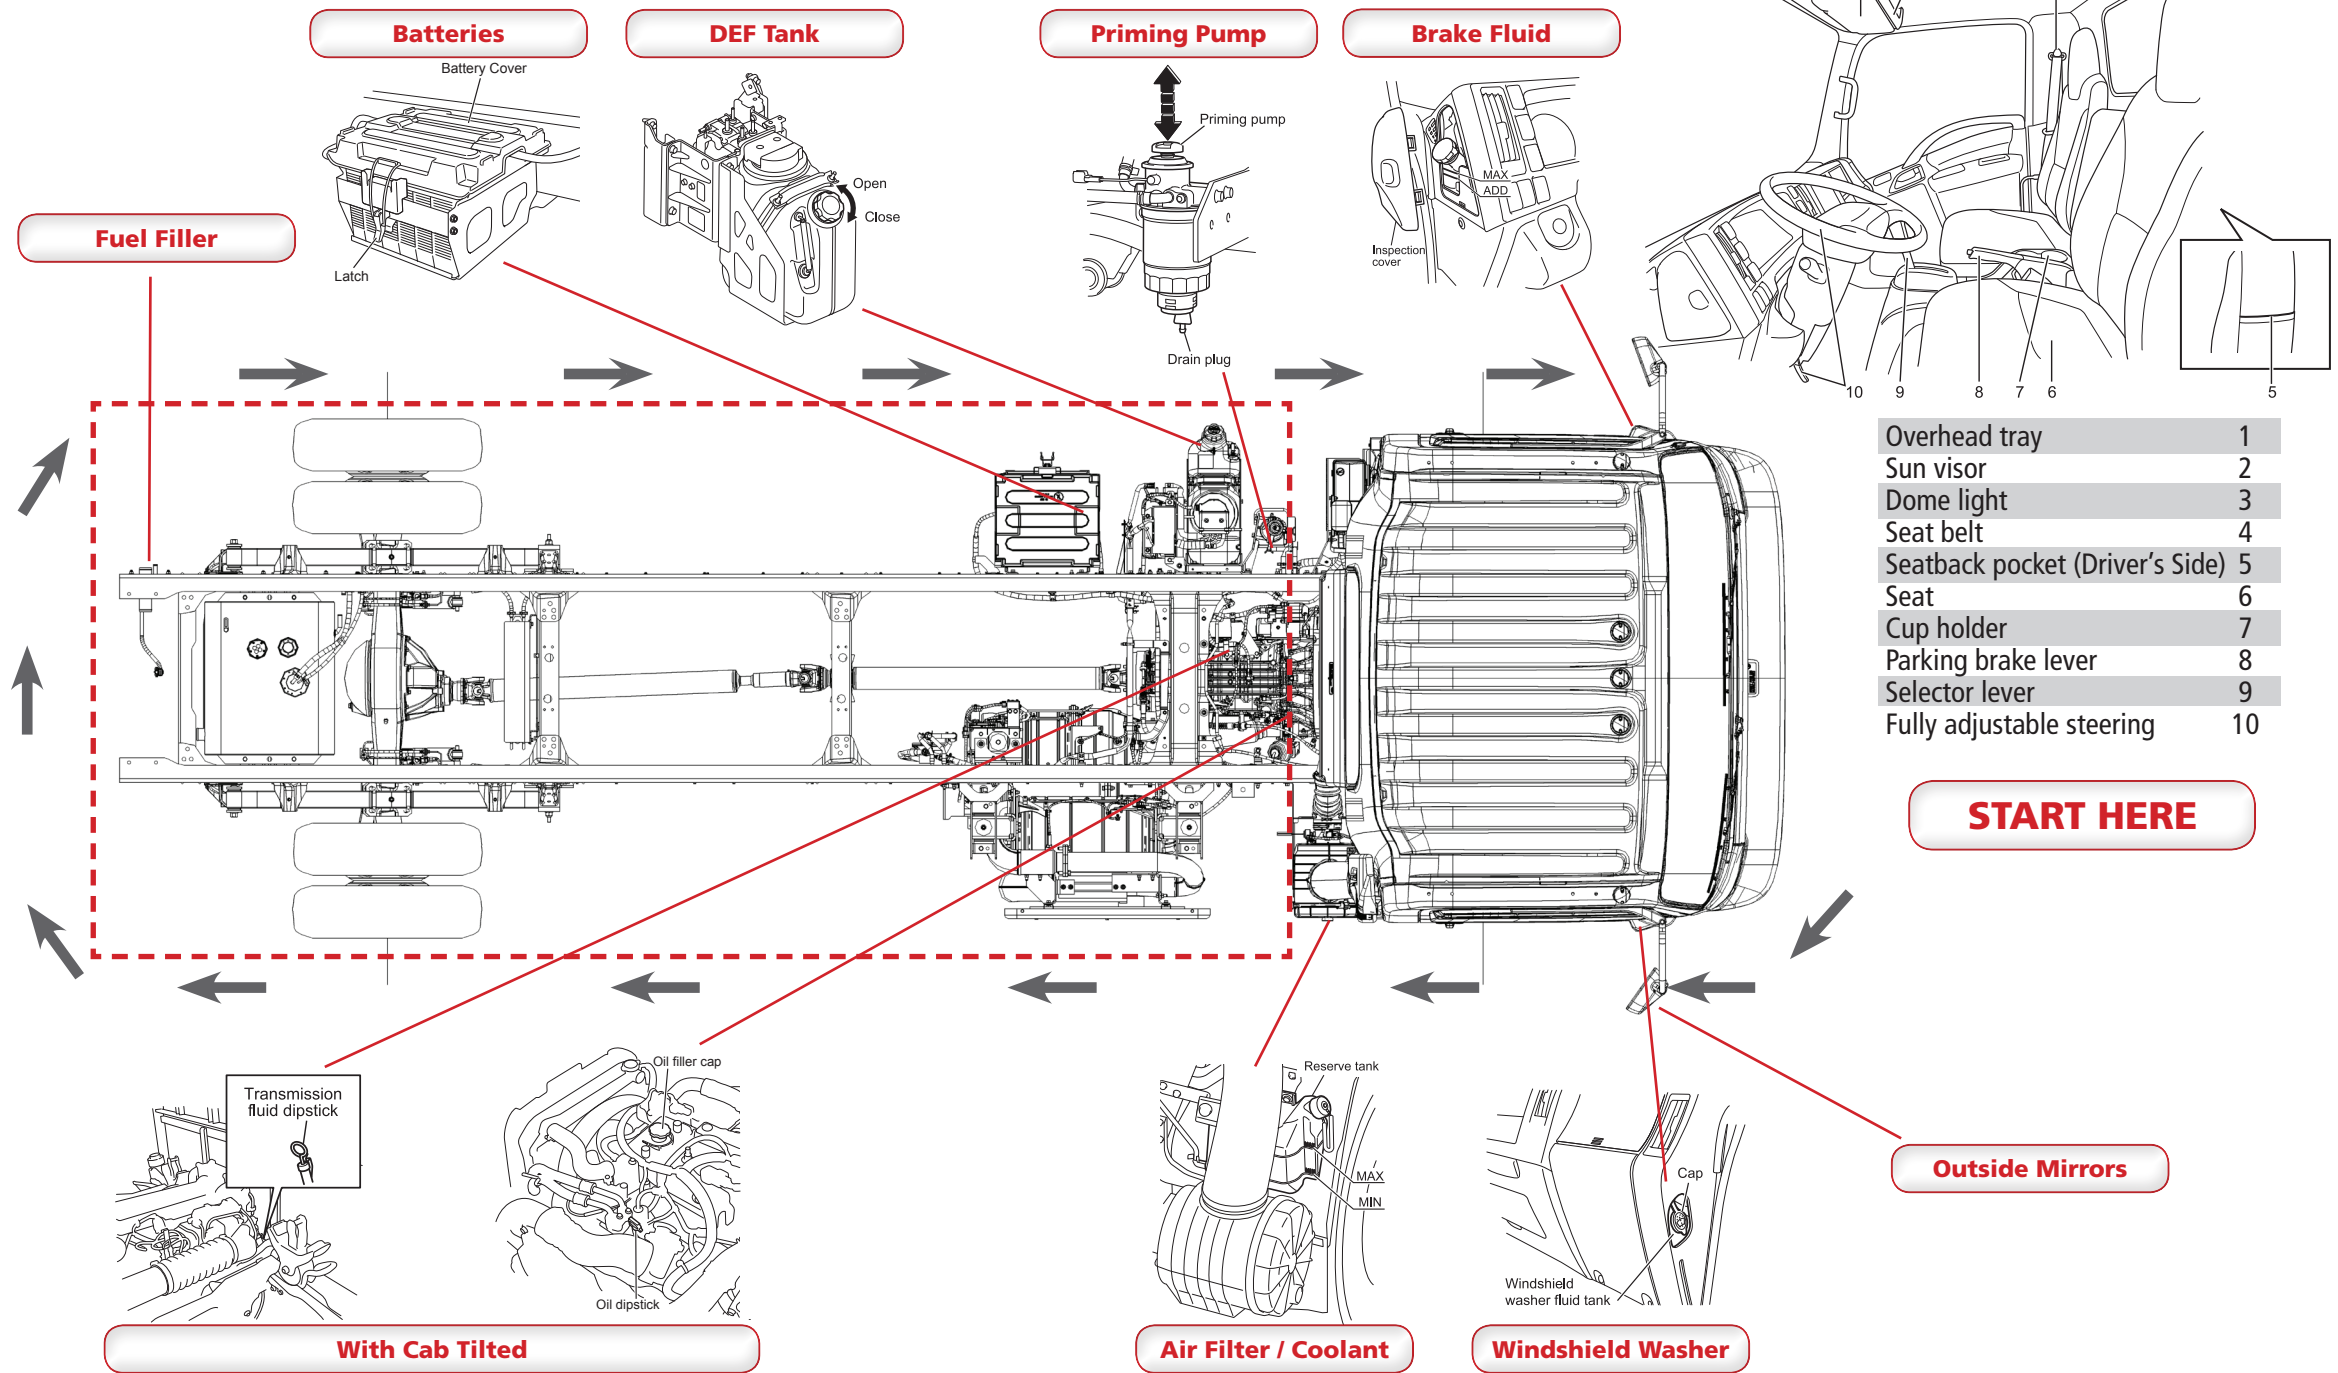


ISUZU DRIVER ORIENTATION

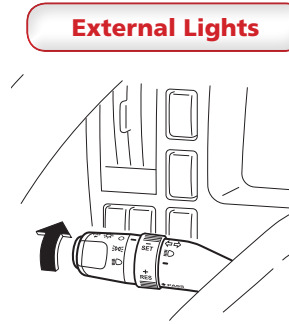









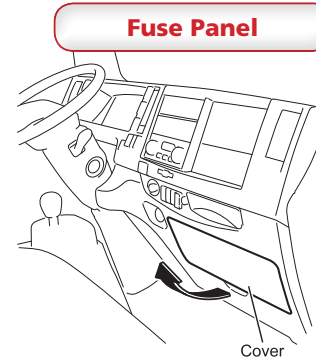


ISUZU DRIVER ORIENTATION

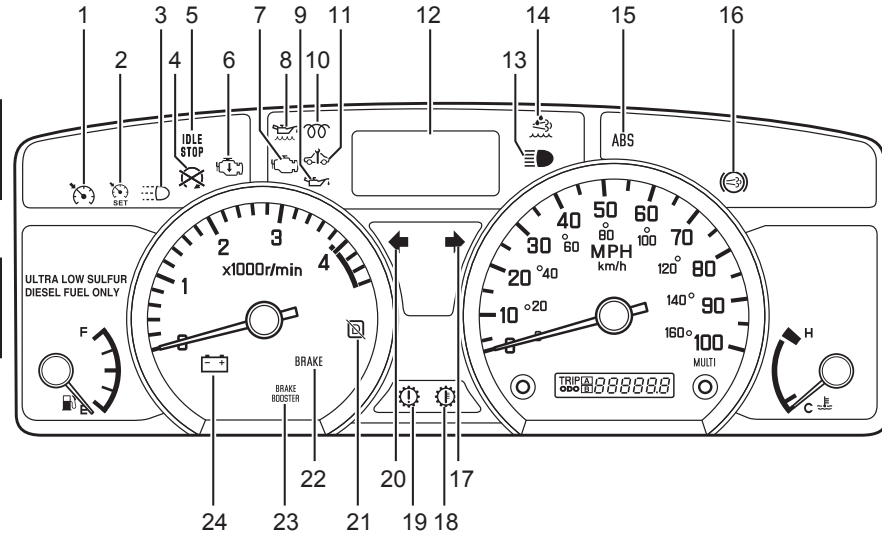

DEF Level

Remaining level	Indication	Color
Level 4 (4/4)		Green
Level 3 (3/4)		Green
Level 2 (2/4)		Green
Level 1 (1/4)		Green

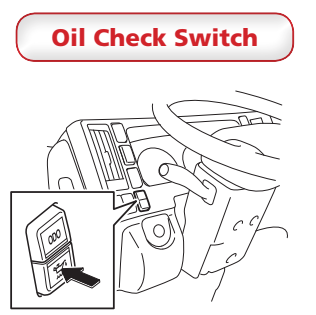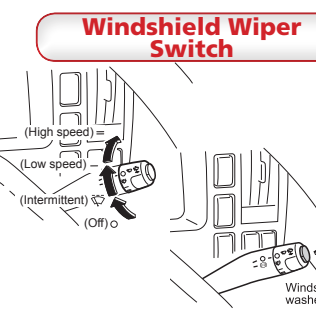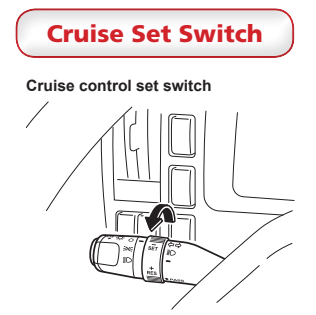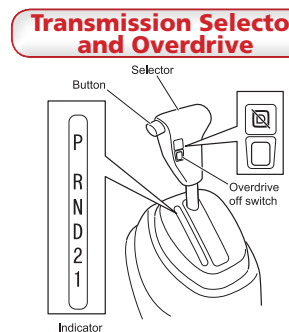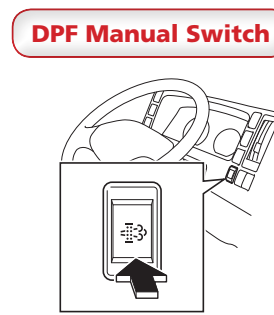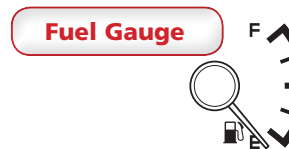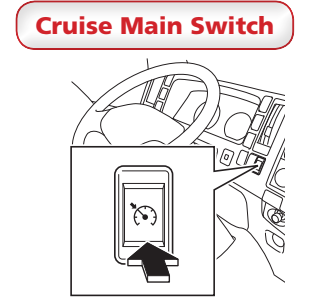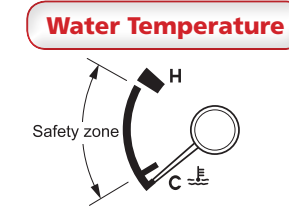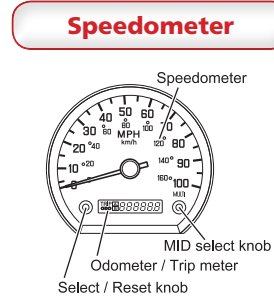

Cruise main indicator light	1	Diesel exhaust fluid (DEF) indicator light	14
Cruise set indicator light	2	ABS warning light	15
Daytime running lights (DRL) indicator light	3	Exhaust brake indicator light	16
Engine alarm (shutdown) warning light	4	Turn signal and hazard warning indicator light - right	17
Idling stop indicator light	5	Automatic transmission fluid (ATF) temperature warning light	18
Reduced engine power indicator light	6	Check transmission warning light	19
Check engine malfunction indicator light	7	Turn signal and hazard warning indicator light - left	20
Engine oil level indicator light	8	Overdrive off indicator light	21
Engine oil pressure warning light	9	Brake system warning light/Parking brake indicator light	22
Glow plug indicator light	10	Brake low vacuum warning light/Brake booster warning light	23
Service vehicle soon (SVS) indicator light	11	Battery discharge warning light	24
Multi-information display (MID)	12		
Headlights high beam indicator light	13		